

!Quest Test Prep is the smart way to study for the SAT/PSAT/ACT!



College Test Prep System

The smart way to prepare for the SAT/PSAT/ACT!



Expand with new quiz questions based on your \* school textbook: Select your textbook and chapter, and then play quiz games to master the material!

[Cartridges sold separately] \*Not all textbooks supported.



Grade 5

Grades 6-8

Expand your iQuest™ handheld with questions based on your \* school textbooks!



It's Easy!  
1. Register at Leapfrog.com.  
2. Purchase a Never-Ending Learning Club™ outline only membership. \*\*  
3. Print as many outlines as you like.

\*\*Requires Adobe Acrobat. Annual membership fee applies.



Join the Never-Ending Learning™\*\* Club and you can print detailed summaries of concepts and facts, including definitions of key terms and examples.

Get printable chapter outlines to help ace your tests!

Welcome to the iQuest™ system!

We believe that learning, including studying for tests and quizzes, can be fun. We developed the iQuest handheld to provide a fun, fast, effective way for students to review classroom material and prepare for their weekly quizzes and tests based upon the textbooks they are using and the specific chapters they study each week.

We know that teachers are students' most important resource. To excel in school, students need to listen in class, take notes, read textbooks and review supplemental materials. There is no substitute for good study habits. The iQuest system reinforces good study habits and supplements the learning process in a fun, engaging way.


The iQuest handheld is designed to act as a personal tutor. We partnered with The Princeton Review to create the iQuest educational content. Textbook chapters are organized into outlines with key points and concepts. Fun quizzes with hints help students arrive at the correct answer.

Finally, the iQuest handheld includes fact follow-ups to introduce supplemental information about a topic. In addition, students stay organized with a scheduler, address book, electronic notepad, dictionary and calculator.

The iQuest system is from Quantum Leap™, a LeapFrog brand that focuses on providing customized curriculum. There are two easy ways to expand and customize the learning for the iQuest handheld with questions based on your textbooks. The Mind Station™ connector lets you download new content using the Internet, and iQuest cartridges come pre-loaded with new content.

To find out more about the Quantum Leap products, visit our Web site at [www.leapfrog.com](http://www.leapfrog.com). We hope you'll join us there.

Sincerely,  
*Mike Wood*  
Mike Wood  
Founder

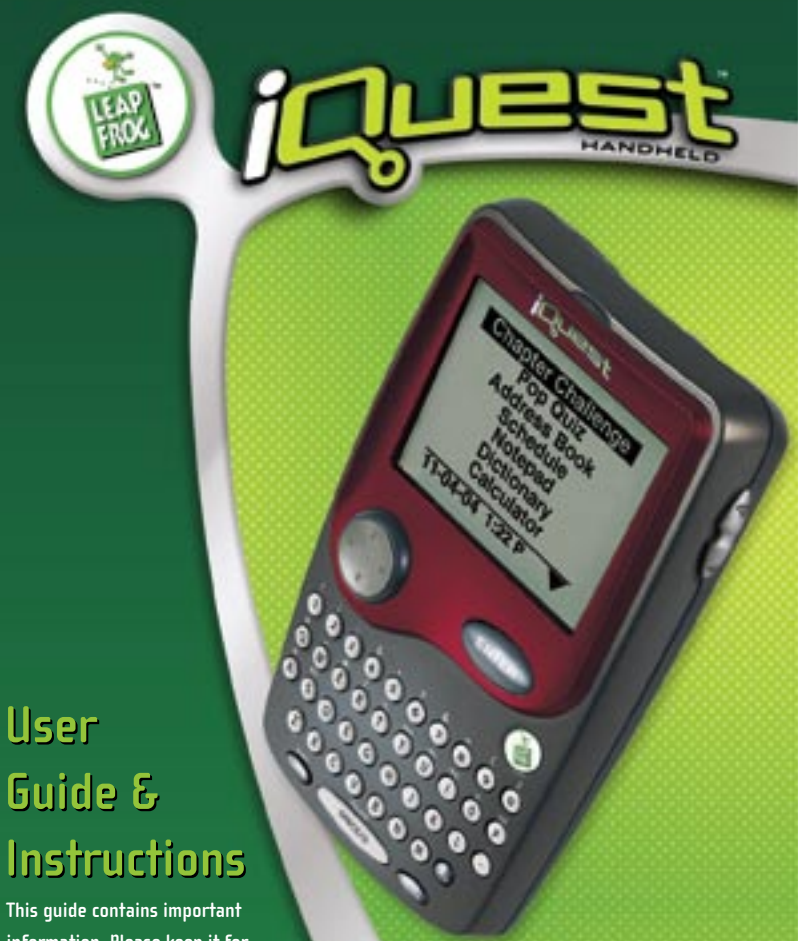

## User Guide & Instructions

This guide contains important information. Please keep it for future reference.


## Educational Content

We partnered with the Princeton Review to create questions for the iQuest™ system. Using the iQuest handheld with cartridges or the Mind Station™ connector (sold separately), you can expand with Math, Science and Social Studies questions for Grades 5, 6, 7, and 8. The iQuest system supports books from the following textbook publishers:

• Addison Wesley
• Creative Publications
• Dale Seymour Publications
• Everyday Learning Corporation
• Glencoe
• Harcourt Brace
• Heath
• Holt, Rinehart and Winston
• Houghton Mifflin
• Macmillan
• McDougal Littell
• McGraw-Hill
• Pearson
• Prentice Hall
• Saxon Publishers, Inc.
• Scott Foresman
• Silver Burdett Ginn
• Steck-Vaughn
• West Publishing Company

Over 260 textbooks supported!  
Visit [www.leapfrog.com](http://www.leapfrog.com) for more details.  
The iQuest system is not affiliated with or endorsed by publishers.

## iQuest™ USER GUIDE

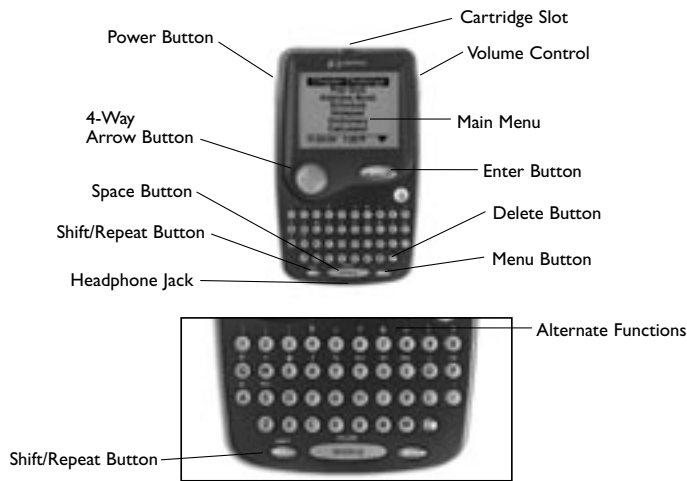

In order to use the special keys marked above the standard keys, press the Shift/Repeat Button once and then the key. This button allows you to use alternate key functions.

### FEATURES

#### POWER BUTTON

Turn on the iQuest™ handheld by pressing the power button. Press it again to turn the unit off. Note: If product is left unattended for a few minutes, it will shut off automatically to conserve battery power.

#### MAIN MENU BUTTON

Press the Menu Button at any time to pause game play or end game play and return to the Main Menu.

#### VOLUME CONTROL

Press the button up for higher volume and press the button down for lower volume.

#### SHIFT BUTTON

To type a capital letter, press the Shift Button once and then press the letter key. You don't need to hold the Shift Button down. To use the alternate keys, press the Shift Button once and then press the key.

#### REPEAT BUTTON

Didn't see the question the first time? Press the Repeat Button to see it again.

#### ARROW BUTTON

Use these multi-purpose controls to move through various menus.

#### CARTRIDGE SLOT

You must insert a cartridge into the iQuest™ handheld in order to play a game.

#### ENTER BUTTON

Press the Enter Button to enter selections.

#### HEADPHONE JACK

The unit has a jack for headphone use. Headphones are not included.

### GETTING STARTED

Congratulations on your purchase of the iQuest™ handheld. The iQuest™ handheld makes preparing for tests and quizzes fun! It's easy to get started.

1. Install 4AAA batteries and turn on the power.
2. You will see the **MAIN MENU**:



The main menu provides access to all of the iQuest™ handheld features and game modes. You can access the main menu at any time by selecting the Menu Button.

3. Enter your preferences following the steps below.

#### Primary User:

1. Scroll through the main menu using the arrow key and select Options & Setup.
2. Press the Enter Button.
3. Type in your name using the keyboard.
4. Press the Enter Button.
5. The name entered should be the primary user.

#### Set the Date/Clock:

1. Type in the date: xx/xx/xxxx
2. Press the Enter Button.
3. Enter the time.
4. Designate AM/PM with A or P.

#### Set Audio Preferences:

1. Select "Music ON" or "Music OFF" to turn the music on or off.
2. Select "Questions ON" or "Questions OFF" to turn the question audio in Chapter Challenge on or off.
3. Adjust the master audio volume by increasing or decreasing the volume level using the Volume Control Button.
4. Select Alarm "ON" or "OFF" to turn the Schedule Alarm on or off. If you select "ON," your iQuest™ handheld will "wake up" if the unit is off.

#### Now you are ready to get started!

### GAME MODES

The iQuest™ handheld has two different game modes to help you master textbook material—Chapter Challenge & Pop Quiz. A cartridge must be inserted into the iQuest™ handheld in order to play an iQuest game.

#### Chapter Challenge:

##### A thorough review of chapter material with hints for every question.

1. A multiple-choice question is presented on the screen. Press the Shift/Repeat Button at any time to see the question again.
2. Press the Enter Button or the Down Arrow Button to see the answer choices.
3. Select your answer choice using the Arrow Button.
4. Press the Enter Button to submit your answer choice.
5. If you are not sure of the correct answer, you can select a hint instead of an answer choice by selecting <<Hint>> at any time.
6. Once you've completed a question set, you will have the opportunity to replay the questions which you answered incorrectly. You can either replay the questions you missed or end the game.
7. Once you've completed all the questions in the question set, you'll receive your results and a score.

#### Pop Quiz:

Answer as many questions as you can before time runs out!

1. A multiple-choice question is presented on the screen. Press the Shift/Repeat Button at any time to see the question again.
2. Press the Enter Button or the Down Arrow Button to see the answer choices.
3. Select your answer choice using the Arrow Button.
4. Press the Enter Button to submit your answer choice.
5. You may skip a question instead of choosing an answer by selecting <<Skip>>.
6. If time remains once you have played all of the questions in a set, you have the opportunity to replay the questions you skipped.
7. Once you've completed a round of questions, or time is up, you'll receive your results and a score.

#### Pausing Game Play:

You can pause and save your game while playing Chapter Challenge and Pop Quiz.

1. Press the Menu Button once to pause your game.
2. To exit the game without saving, press the Menu Button again.
3. To save the game, press the Space Button.

### PDA FUNCTIONS

The iQuest™ handheld also includes the following features to help you study and to stay organized:

- Address Book
- Schedule
- Notepad
- Dictionary
- Calculator
- Equation Calculator
- Anagram Game

#### Dictionary

The iQuest™ handheld contains a Merriam-Webster dictionary with over 75,000 words complete with parts of speech, phonetic pronunciation, and synonyms. To use the dictionary, select Dictionary from the Main Menu and press the Enter Button.

1. Type the first few letters of the word you are searching for.
2. If more than one word matches the text you entered, you will be given a set of words to select from.
3. Use the Arrow Button to identify and select the correct word.
4. Press the Enter Button.
5. The word and definition will appear.
6. Use the Arrow Button to scroll through the definition.
7. Type the first letters of a new word to begin another search.

#### Calculator

The iQuest™ handheld also contains two calculators—the on-screen Calculator and the Equation Calculator.

##### On-screen Calculator

A simple calculator for all your basic math problems.

1. Select Calculator from the Main Menu.
2. Use the Arrow Button to choose the number or function and then press the Enter Button. You can also use the keyboard to select a number.
3. To see the answer, select the = button on the screen, then press the Enter button. Or, just press the = key (A key) on the keyboard.

#### Schedule

The iQuest™ handheld includes a schedule/calendar to keep track of events and appointments. Store up to 15 events per day. To use the schedule, select Schedule from the Main Menu.

1. A calendar showing the current month will appear.
2. The current day is highlighted.

3. Use the Arrow Button to select another day.
4. Use the Arrow Button to highlight the month or to select another month.
5. To enter an event, select the day of the event and press the Enter Button:
  - a. Select Add New Event and press the Enter Button.
  - b. Input the time of the event and designate AM or PM using the A or P key.
  - c. Type in the event.
  - d. To set an alarm, select "ON" or "OFF" using the O key.
  - e. To set a weekly event, select "YES" or "NO" using the Y or N key.
  - f. Press the Enter Button to save the event.
6. To edit an event, select the event and press the Enter Button.
7. Edit the text by typing over the previous text.
8. To delete an event, select the event and press the Delete Button.

#### Address Book

The iQuest™ handheld includes an address book to store names and addresses. To use the address book, select Address Book from the Main Menu.

1. To enter a new address, select the Add New Address field and press the Enter Button.
2. Input the address fields:
  - First Name
  - Last Name
  - Phone
  - E-mail
  - Street
  - City
  - State
  - Zip Code
  - Note
3. Press the Enter Button to save your entry.
4. To view an existing entry:
  - a. Select Address Book.
  - b. Type the first letter of your contact's first name to jump to the entry, or scroll through the list using the Arrow Button.
  - c. Press the Enter Button to see the entire address.
5. To edit an address:
  - Press the Enter Button when viewing an address.
  - You can edit each line of the address.
6. Remember, to enter a capital letter, press the Shift Button once and then the letter key.
7. To delete an address entry, press the Delete Button, then select YES.

#### Notepad

The notepad stores up to 100 notes. Select Notepad from the Main Menu to create a note.

1. To enter a note, select Add New Note and press the Enter button.
  - a. Type in your note. The first line of your note will serve as the title of your note.
  - b. Press the Enter Button to save the note.
2. To view a previously entered note:
  - a. Use the Arrow Button to scroll through the indexed notes.
  - b. Press the Enter Button to select the note you want to read.
  - c. Use the Arrow Button to scroll through the note.
  - d. Press the Enter Button to return to the Notepad Index.
3. To edit a previously entered note, use the Arrow Button to scroll through your indexed notes.
  - a. Press the Enter Button to select the note you want to edit.
  - b. Type in the new text.
  - c. Press the Enter Button to save the note and return to the Notepad Index.
4. To delete a note, select the note and then press the Delete Button.

#### Anagram Game

To play the Anagram Game, select Anagram Game from the Main Menu and press the Enter Button.

1. Select Options. Enter the minimum number of letters for a word using the 3, 4 or 5 keys. To play a timed game, press the O key to select "On." Use the Arrow Button to scroll through the time options.
2. Press the Enter Button to save your options.
3. Select Start and press the Enter Button to start a game.
4. A combination of letters will appear. Use the keyboard to enter as many words as you can create from the set of letters. The smallest word you can enter depends on the word size you entered in Options.
5. Press the Enter Button to submit your word.
6. Press the Space Button and select Yes.
7. Press the Enter Button to start a new game.

### CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Avoid exposing the product to extreme temperatures.

**WARNING:** This product may go to sleep when subjected to static electricity (electrostatic discharge disturbance). You may reset the product by pressing the "ON" Button or re-installing the batteries to resume normal function.

#### Battery Installation:

1. Requires 4 AAA alkaline batteries.
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

#### Battery Safety:

- Batteries are small objects. Replacement of batteries must be done by adults.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Only BATTERIES of the same or equivalent type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

Troubleshooting	
Symptom	Try This
Product does not turn on or does not respond.	<ul style="list-style-type: none"><li>• Remove batteries and put them back in.</li><li>• Make sure battery cover is securely attached.</li><li>• Clean battery contacts with rubbing alcohol.</li><li>• Install new batteries.</li></ul>
Product warning, "Warning! No Questions" or "This cartridge is unreadable."	<ul style="list-style-type: none"><li>• Turn off unit, remove cartridge and reinsert.</li></ul>

#### U.S. Consumer Service contact:

Please visit our U.S./Canada Consumer Support Web site at <http://www.leapfrog.com/support>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

#### U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Friday, 5:00 AM to 7:00 PM and Saturday 7:00 AM to 4:00 PM, Pacific time

#### U.K. Consumer Service contact:

Please visit our U.K. Consumer Support Web site at <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

#### U.K. Office:

Tel: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM

**IMPORTANT:** Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Note:

This device complies with Part 15 of the FCC rules.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

#### Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

QUANTUM LEAP, the Quantum Leap Logo, IQUEST, NEVER ENDING LEARNING and MIND STATION are trademarks or registered trademarks of Leapfrog Enterprises, Inc. © 2001-2003 LeapFrog Enterprises, Inc. All rights reserved.

#### MADE IN CHINA

Visit our fun-filled Web site at [www.leapfrog.com](http://www.leapfrog.com)  
For Grades 5 and up, ages 10 and up.