

More fun learning toys from LeapFrog!


Learning Band™ Walker

9+ months



Learning Friends™ Phonics Bus™

12+ months

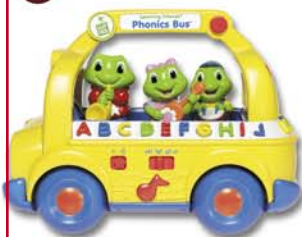

Fridge Farm™ Magnetic Animal Set

12+ months



See & Learn™ Driver

12+ months



LEAP FROG baby StoryBlock™ Book

Interactive block book encourages baby to join in the reading fun!



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

www.leapfrog.com

How to get the most out of your StoryBlock™ Book!

Introduce pictures and words!

It's never too early to familiarize your baby with early reading concepts and develop a sense of excitement about books and the stories they contain!

- ★ Begin exploring the StoryBlock Book together. As you explore, point out and comment on the pictures in the book. As your child grows, begin introducing the simple story lines and start matching pictures with the words they represent. Simple rhymes, songs and interactive block play help show baby that books are great fun!

Find numbers and animals!

Exposure to numbers and counting early in life can make it easier for your child to learn more advanced skills such as number names, counting in sequence and matching numbers with objects.

- ★ As you read with your little one, point out the numbers on each page and say them out loud.

- ★ Once your baby becomes familiar with each number, count out the number of animals on each page. Soon, your baby will be more familiar with how numbers can correlate with objects, and how numbers and counting are part of his everyday life!



Discover sounds!

You can help your baby understand the connection between objects and their names by reading out loud, pointing to objects as you say a word, and labeling each object on a page.

- ★ As you place the animal block in the book, say the name and sound of each animal out loud. Soon, your baby will begin to imitate your sounds and try to replicate them on his own! Each new label your child puts to an object helps increase his vocabulary.


Make a match!

Playing with puzzles can help your child recognize, compare, and match similar shapes and objects. Additionally, introducing structured and unstructured play can help your little one develop independent ideas.

- ★ Begin with structured play, and show your baby how to make a match with the animals on the block and the animals on the page.
- ★ Later, encourage your child to explore on his own and experiment with mixing and matching the animals on the block with the animals on the page. Through his experiments, your baby can begin to exercise his own ideas and discover his own interests.



INSTRUCTIONS FOR PLAY

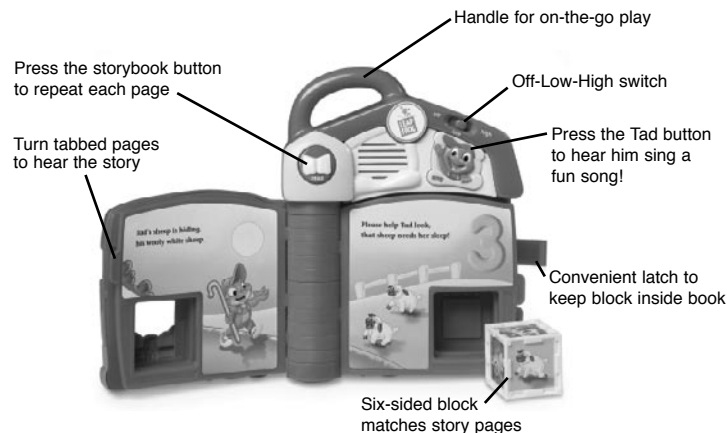

Turn On

- Turn on the STORYBLOCK™ Book by sliding the Off-Low-High switch to the Low or High position.

Turn Off

- Turn off the STORYBLOCK™ Book by sliding the Off-Low-High switch to the Off position. The book will also shut off automatically after 30 seconds of inactivity.

How to Play with the STORYBLOCK™ Book

- Open the book to any page and hear the story read out loud.
- To hear the name and sound of an animal, insert the block so that the side facing up matches the picture on each page. Press the block down to hear the animal name and sound. If the wrong side of the block is inserted, the child will still hear the name and sound of the animal on the block.
- Push the Tad character button on top of the barn to hear a fun song about the animals featured on that page.
- Push the storybook button on top of the barn to repeat the story on that page.
- To protect battery life, when the book is closed, the song and story buttons will not activate.

Caring for your STORYBLOCK™ Book:

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

Battery Information:

Batteries included are for in-store demonstration purposes only. Replace with new alkaline batteries to improve performance.

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- NE PAS INCINÉRER les piles usagées.
- NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir.
- NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- NE PAS UTILISER de piles rechargeables.
- NE PAS RECHARGER des piles non rechargeables.
- NE PAS COURT-CIRCUITER les terminaux d'alimentation.

Battery Installation:

- Requires 3 AA (called LR6 in some countries) alkaline batteries.
- Open the battery door with a screwdriver.
- Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
- Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none">Make sure batteries are correctly installedMake sure battery cover is securely attachedRemove batteries and put them back inClean battery contacts with rubbing alcoholInstall new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none">Install new batteriesClean battery contacts with rubbing alcohol
Toy makes improper responses	<ul style="list-style-type: none">Install new batteriesClean battery contacts with rubbing alcohol

U.S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lfcanda.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)
Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435 Eire: 00 44 1702 200244
Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference, and
2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can

be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LEAPFROG LOGO, LEARNING BAND, LEARNING FRIENDS, PHONICS BUS, FRIDGE FARM, SEE & LEARN and STORYBLOCK are trademarks or registered trademarks of LeapFrog Enterprises, Inc.

© 2002, 2004 LeapFrog Enterprises, Inc. All rights reserved. U.S. Patent Pending.

Visit our fun-filled Web site at www.leapfrog.com

For ages 9 months and up
Convient aux enfants à partir de 9 mois