

More early learning toys from LeapFrog Baby!



LittleTouch™ LeapPad™
LEARNING SYSTEM

6-36 months



Learning Band™ Walker

9+ months



**Learning Friends™
Phonics Bus™ Vehicle**

12+ months

Learning Connections™ Train

9+ months



Some products may not be available in all markets.



Learn-Around™ Playground

Baby can learn
UP, DOWN and
ALL AROUND
this smart
playground!



Parent Guide & Instructions

*This guide contains important information.
Please keep it for future reference.*

www.leapfrog.com

How to get the most out of your Learn-Around™ Playground!

Encourage Hands-On Learning!

The best way to reinforce learning is through a multi-sensory experience that involves sight, sound and touch.

★ When your baby is sitting and crawling, she'll have fun discovering the Singing Rainbow's five shapes: circle, heart, triangle, square and star. Say the name of the shapes as you trace over them with your finger. Gently guide your baby's finger over the shapes so she can mirror your tracing. Be sure to say the shapes and colors/colours out loud to reinforce the learning. For example: "See, we've drawn a red heart!"

★ Standing and cruising will introduce baby to the Number Rock Keyboard, and numbers 1-5. Reinforce your baby's learning by counting the keys with him. With the volume down, sing as you touch the keys and count from 1 to 5 together! Hearing the song from someone he knows and loves will delight your baby and encourage counting!

Compose and Create Music!

An introduction to instruments, tempo and rhythm encourages music learning and creativity. Turn the book page on your Learn-Around Playground to "Music Playground" to get the music started.

★ Sit with your baby in front of the Learn-Around Playground and introduce her to the music that she'll hear when she tugs on the Touch-to-Learn Textures. Bat the Singing Rainbow for baby and then show her different sound combinations she can make by dropping the ball down its chute, tugging on the textures, and batting the colored/coloured tabs.

Compose music with her—you bat the tabs while she tugs

on the textures. You'll encourage her to learn to combine the sounds on her own.

★ When baby can stand and cruise, he'll continue to learn to compose his own music.

After he's started the main music, show him

how to change the tempo by

sliding Leap's tricycle, add instruments by pressing the Number Rock Keyboard, and hear letters sung over the tune he's creating by pressing an alphabet letter. Begin by exploring all these features together and then encouraging him to compose with you: "I'll press the letters, while you slide Leap. Okay, now add an instrument by pressing one of the number keys." Then encourage your little maestro to compose on his own!




Discover Language and Letters!

Introducing words and letters at an early age is a great way to help build a familiarity with language.

★ Your baby's babbles and coos are first attempts at imitating the language he hears every day! When he bats the Singing Rainbow or tugs the Touch-to-Learn Textures, he's rewarded with meaningful words and rhymes that encourage memory and speech. Reinforce this learning by discovering the same textures in his everyday world. For example, show him fuzzy fabric on a sofa or chair and remind him that he knows this texture.

★ As your baby grows, she'll discover letters A-Z! Point out individual letters that have meaning to your little one. For example, point out the letter that begins your child's name. Ask her to find it among the Press-to-Learn Letters and say it out loud. Encourage her learning by pressing the letter and hearing it out loud until she learns the letter herself.

INSTRUCTIONS FOR PLAY

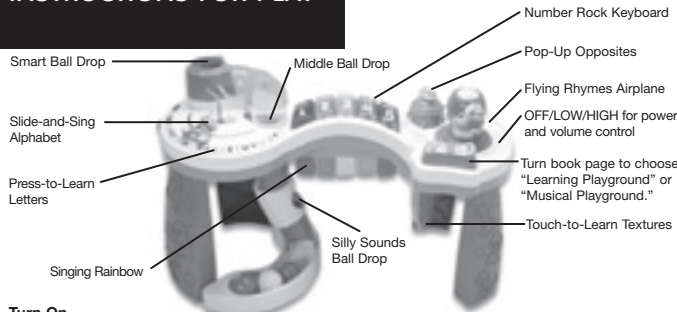

Turn On

- Turn on LEARN-AROUND™ Playground by sliding the OFF/LOW/HIGH switch to the LOW/HIGH position.

Turn Off

- Turn off LEARN-AROUND Playground by sliding the OFF/LOW/HIGH switch to the OFF position. LEARN-AROUND Playground will shut off automatically after 30 seconds of inactivity.

How to Play with LEARN-AROUND Playground

Carefully follow the assembly instructions included with this product.

Learning Playground:

Turn book page to “Learning Playground” mode.

Sitting

When your little one is busy discovering the world close to the ground, the LEARN-AROUND Playground offers great opportunities for learning exploration!

- Singing Rainbow introduces colors/colours and shapes.
- Touch-to-Learn Textures introduces bumpy, fuzzy and smooth.
- Silly Sounds Ball Drop introduces cause and effect and develops motor skills.

Standing

When baby is standing, cruising and ready to discover more—the LEARN-AROUND Playground introduces the next stages of learning with even more activities, songs and fun!

- Slide-and-Sing Alphabet introduces “The Alphabet Song” in 6 parts.
- Press-to-Learn Letters introduces the alphabet!
- Press any letter to hear its name.
- Press the letters in order to hear “The Alphabet Song.”
- Flying Rhymes Airplane introduces rhymes and music.
- Number Rock Keyboard introduces counting 1-5 with a rock and roll number song.
- Pop-Up Opposites introduces the concept of opposite words.
- Middle Ball Drop announces “Down!”
- Highest “Smart” Ball Drop introduces colors/colours—you’ll hear the color/colour of the ball announced when it is dropped.

Music Mode:

Turn book page to “Music Playground” to get the music started.

The Music Mode lets your child compose. Engage the different activities to create a fun symphony with real instrument sounds, nursery rhymes and tempos.

Sitting

- Bat Singing Rainbow tabs and hear real harmonica riffs.
- Bat Touch-to-Learn Textures and hear real flute, marimba and harp glissandos.
- Drop the ball down the Silly Sounds Ball Drop and hear a fun sound effect.

Standing

- Number Rock Keyboard lets you add and take away instruments.
- Slide-and-Sing tricycle changes the tempo of your song.
- Press-to-Learn Letters play the letter names out loud.
- Flying Rhymes Airplane makes fun sound effects.
- Pop-Up Opposites plays a song when you push the character down.

Battery Information:

3 AA alkaline batteries required (not included.)

Battery Safety:

Batteries are small objects. Batteries must be replaced by an adult.

Follow the polarity (+/-) diagram in the battery compartment.

Promptly remove dead batteries from the toy.

Dispose of used batteries properly.

Remove batteries for prolonged storage.

Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte.

Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.

Enlevez rapidement les piles usagées du jouet.

Suivez les procédures adéquates pour vous débarrasser des piles usagées.

Retirez les piles en cas de non-usage prolongé.

Utilisez uniquement des piles ou accumulateurs du type recommandé ou d’un type équivalent.

NE PAS INCINÉRER les piles usagées.

NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir.

NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c’est-à-dire alcalines/standard).

NE PAS UTILISER de piles rechargeables.

NE PAS RECHARGER des piles non rechargeables.

NE PAS COURT-CIRCUITER les terminaux d’alimentation.

Battery Installation:

Requires 3 AA (called LR6 in some countries) alkaline batteries.

1. Open the battery door (located on the underside of the tabletop) with a screwdriver.
2. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
3. Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure batteries are correctly installed • Make sure battery cover is securely attached • Remove batteries and put them back in • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes improper responses	<ul style="list-style-type: none"> • Clean battery contacts with rubbing alcohol • Install new batteries

U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lfcanada.custhelp.com>, 24 hours a day.

You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24

hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

AVERTISSEMENT : Tout changement ou modification de cette unité n’ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l’annulation du droit de l’utilisateur à exploiter l’équipement.

Note: This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog’s option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog Baby Logo, LEAPPAD, LEARN-AROUND, PHONICS BUS, LEARNING BAND, LITTLE TOUCH, LEARNING CONNECTIONS and LEARNING FRIENDS are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2005 LeapFrog Enterprises, Inc. All rights reserved.

U.S. Patent Number 5,997,304

Visit our fun-filled Web site at: www.leapfrogbaby.com

For ages 6-36 months.

Convient aux enfants de 6 à 36 mois.