

More fun learning toys from LeapFrog!



Touch and Tug™
Discovery Book

Birth +

Baby Counting Pal™

3+ months



Learn and Groove™
Activity Station

4+ months to walking age



Learning Band™
Walker

9+ months



Magic Moments™ Learning Seat

Early learning through
classical music, rhymes, songs,
and captivating lights!



Parent Guide & Instructions

*This guide contains important information.
Please keep it for future reference.*

www.leapfrog.com

How to get the most out of your Magic Moments™ Learning Seat!

Get Involved!

Your baby's first months are full of discovery and learning! Even before he is mobile, your baby will respond to games and activities. Play along with baby when he bats at the animals on the Magic Moments™ Learning Seat. Every time he activates sounds or music, smile, clap and provide praise. Even at a very young age, your baby will learn to anticipate positive responses to his actions!

Get Moving!

The Magic Moments™ Learning Seat is designed to reward your baby's early physical accomplishments. In the early months, when your baby's movements are more sporadic and less directed, you can gently lead your baby's hands toward the animals, or help direct your baby's feet toward the kick pad.

Your baby will love to feel your soft touches, and encouraging movement is a great way to help your baby develop gross motor skills!

Discover Colors!


Your little one discovers colors at a very early age, and uses colors to distinguish objects. Encourage your little one to learn about and explore colors by playing a fun game with the animals on the Magic Moments™ Learning Seat. Point to each animal as you say its color. Then say a color and wait to see if your little one points to the correct object before you do! Your little one will soon begin noticing and recognizing different colors, and will most likely start developing a preference for a "favorite" color.

Make Music!

For your baby, music can bring together many learning elements. Music engages memory, imagination and language, and it can help build self-confidence! Musical products with high-quality sound are a great way to introduce music into your baby's world. Sing along to the songs included in the Magic Moments™ Learning Seat, and hum to the classical music—you'll see your baby's face fill with delight!



INSTRUCTIONS FOR PLAY

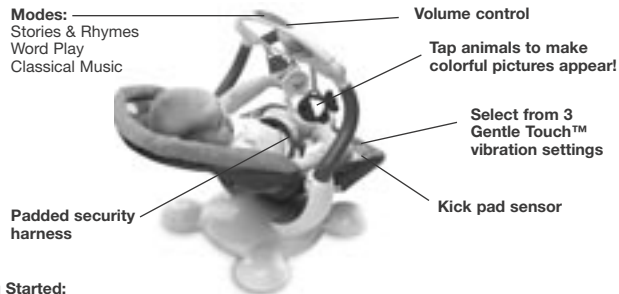

Getting Started:

Turn on the MAGIC MOMENTS™ Learning Seat by sliding the mode selector from the OFF position to any of the three modes.

Automatic Shut-off:

The MAGIC MOMENTS™ Learning Seat will automatically turn off after 2 minutes of inactivity.


Volume Control:

Choose LOW  or HIGH  volume setting.


How to Play with the MAGIC MOMENTS™ LEARNING SEAT:

Slide the mode selector, located on the activity bar, to any mode.


Word Play Mode:

- Slide switch to 
- As baby taps or pulls the animals, he will hear short, descriptive phrases that introduce word-object association and build early language skills.
- When baby kicks, lights will twinkle and a fun melody will play.

Stories & Rhymes Mode:

- Slide switch to 
- As baby taps or pulls the animals, he will make a rhyme! In this mistake-free mode, baby can bat at the animals in any order to create a rhyming song!
- When baby kicks, lights will twinkle and a fun melody will play.

Classical Music Mode:

- Slide switch to 
- As baby taps or pulls the animals, he will see the lights twinkle in response.

Included songs:
Angel's Serenade by Gaetano Braga
Flute Clock by Ludwig Van Beethoven
A Tale of Distant Lands by Robert Schumann
Sonata 13 by Wolfgang Amadeus Mozart
Suite One by Henry Purcell

- Music plays for 5 minutes and is reactivated when baby or parent taps an animal.
- When baby kicks, lights will twinkle.

Gentle Touch™ Vibration:

- Select from 3 customizable wave-like massage settings to calm baby down.
- Turn on the vibration by sliding the vibration switch to any of the 3 settings.
- Turn off the vibration by sliding the vibration switch to the OFF position.

Care and Maintenance:

- Keep product away from foods and beverages
- Clean with a slightly damp cloth
- Never submerge product in water
- Remove batteries from product for prolonged storage
- Avoid exposing product to extreme temperatures

Battery Information:

Requires 3 D (called LR 20 in some countries) alkaline batteries. Batteries not included.

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

Battery Installation:

1. Locate the battery door on the underside of the kick pad buttons, near the vibration settings.
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure batteries are correctly installed • Make sure battery cover is securely attached • Remove batteries and put them back in • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Install new batteries • Clean battery contacts with rubbing alcohol
Toy makes improper responses	<ul style="list-style-type: none"> • Install new batteries • Clean battery contacts with rubbing alcohol

U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lfcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Friday, 5:00 AM to 7:00 PM and Saturday 7:00 AM to 4:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, TOUCH AND TUG, COUNTING PAL, LEARN AND GROOVE, LEARNING BAND, MAGIC MOMENTS, and GENTLE TOUCH are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © Copyright LeapFrog Enterprises, Inc. All rights reserved.

U.S. Patent Pending.

Visit our fun-filled Web site at: www.leapfrog.com

Birth to 25 lbs. Never use for a child who is able to sit up unassisted. Maximum weight capacity 25 lbs. (11.4 kgs.).