

More fun learning toys from LeapFrog!



Hug & Learn™ Animal Globe

6+ months

Learning Band™ Walker

9+ months



Fridge Farm™ Magnetic Animal Set

12+ months

Learning Connections™ Train

9+ months



LEAP FROG baby Hug & Learn™ Baby Tad™

Play soothing classical music at night or play songs and learning games during the day!



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

www.leapfrog.com

Learning Skills



Problem Solving

An assortment of fine motor activities provide baby with the opportunity to discover new musical sounds, fun songs and colorful lights.



Language Development

Positive responses and rhyming songs help introduce baby to speech sounds, which encourage speech production and language development.



Early Math

Baby can identify shapes and hear shape names, which introduces fundamental geometry skills.



Creativity

Baby Tad is a perfect companion, encouraging the imaginative play that is an early milestone in social development.

Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.


Babies and toddlers are discovering the world for the first time. That is why we develop learning toys that introduce critical discovery skills, including color and shape recognition, fine motor skill development, and social play. They come in playful colors, with engaging features that will captivate your child's imagination.

LeapFrog™ learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our Web site (www.leapfrog.com), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Tom Kalinske
CEO
LeapFrog Enterprises, Inc.

INSTRUCTIONS FOR PLAY

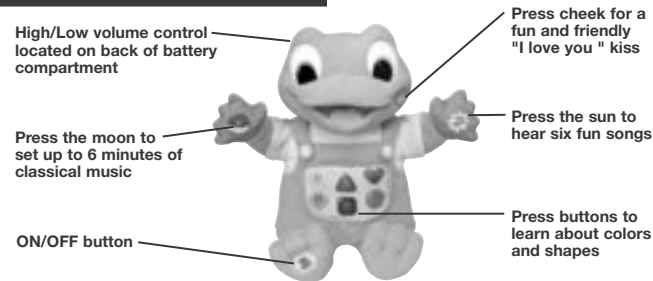

Getting Started:

To turn ON your HUG & LEARN™ BABY TAD™ plush press the ON/OFF button located on the bottom of his right foot. Press the same button to turn him OFF. BABY TAD will automatically turn off after 15 seconds of inactivity. Press any button on BABY TAD to wake him up for more play.

Hear Six Bedtime Melodies

Squeeze BABY TAD's right hand on the moon shape up to six times to hear one to six minutes of uninterrupted classical music. Each consecutive squeeze of BABY TAD's hand adds one additional minute of classical music, for a total of six minutes.

BABY TAD Plays Six Soothing Classical Melodies:

- 1) Adieux – Ludwig van Beethoven,
- 2) Liebestraume – Franz Liszt,
- 3) Romanze – Wolfgang Amadeus Mozart,
- 4) Brahms' Lullaby – Johannes Brahms,
- 5) Traumerei – Robert Schumann,
- 6) Wiegenlied – Franz Schubert

Sing Six Happy Songs!

- Squeeze BABY TAD's left hand on the sun shape to hear one of six fun songs. To play a different song, squeeze BABY TAD's hand again.

BABY TAD Sings Six Fun Daytime Songs:

- 1) Twinkle, Twinkle, Little Star
- 2) Itsy Bitsy Spider
- 3) If You're Happy and You Know It
- 4) Hickory Dickory Dock
- 5) Baa, Baa, Black Sheep
- 6) Where Has My Little Dog Gone

Shapes and Colors!

- Press a shape on BABY TAD's bib to hear the name and color of that shape.
- After every Daytime song, one shape on BABY TAD's bib will flash. Press the flashing shape. BABY TAD will say the color and the name of the shape, and will advance to the next song.

Give a Kiss!

- Press the lips on BABY TAD's cheek for a fun and friendly "I love you" kiss.

Care and Maintenance:

- Keep product away from foods and beverages
- Clean with a slightly damp cloth
- Never submerge product in water
- Remove batteries from the product for prolonged storage
- Avoid exposing the product to extreme temperatures

Battery Information:

Batteries included are for in-store demonstration, and should be replaced to improve performance. Requires 3 AA (called LR06 in some countries) alkaline batteries.

Battery Safety:

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte.

Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.

Enlevez rapidement les piles usagées du jouet.

Suivez les procédures adéquates pour vous débarrasser des piles usagées.

Retirez les piles en cas de non-usage prolongé.

Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS INCINÉRER les piles usagées.

NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir.

NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS UTILISER de piles rechargeables.

NE PAS RECHARGER des piles non rechargeables.

NE PAS COURT-CIRCUITER les terminaux d'alimentation.

Battery Installation:

1. Requires 3 AA (called LR06 in some countries) alkaline batteries.
2. Open the battery door (located on the back inside of the toy) with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none">• Make sure batteries are correctly installed• Make sure battery cover is securely attached• Remove batteries and put them back in• Clean battery contacts with rubbing alcohol• Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none">• Clean battery contacts with rubbing alcohol• Install new batteries
Toy makes improper responses	<ul style="list-style-type: none">• Clean battery contacts with rubbing alcohol• Install new batteries

U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lfcanada.custhelp.com>, 24 hours a day.

You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

AVERTISSEMENT : Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

Note: This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some countries do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog Baby logo, HUG & LEARN, BABY TAD, LEARNING BAND, FRIDGE FARM and LEARNING CONNECTIONS are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2003-2004 LeapFrog Enterprises, Inc. All rights reserved.

U.S. Patent Number(s) 5,944,533 and 6,463,257B1 Patents Pending

Visit our fun-filled Web site at: www.leapfrog.com

For ages 6 months and up
Convient aux enfants à partir de 6 mois