

More fun learning toys from LeapFrog!



## Learning Connections™ Train

All aboard for musical Link and Stack play!

Learning Band™ Walker

9+ months



Alphabet Pal™

12+ months



Fridge Phonics™ Magnetic Letter Set

2+ years



Word Whammer™ Fridge Phonics™ Set

3+ years



### Parent Guide & Instructions

*This guide contains important information. Please keep it for future reference.*

[www.leapfrog.com](http://www.leapfrog.com)

How to get the most out of your Learning Connections™ Train!

#### Count one car at a time!

Learning numbers, counting, number/object correlation and size relationships can help toddlers build a foundation for more complex math concepts.

- ★ As your child plays with the Learning Connections Train, reinforce number/object correlation by emphasizing how each of the objects on the train match with the numbers on the train.
- ★ When your child stacks the train cars, highlight size relationships by reinforcing how the #1 car is smaller than the #2 car, which is smaller than the #3 car.



#### Create color/colour categories!

Babies use colors/colours to help differentiate objects and identify the items in their everyday world.

- ★ Encourage your child to separate each car by color/colour. Then ask him to create “color/colour piles” by finding other objects in the room that are the same color/colour. After a while he will begin to understand how to categorize things in his world using visual characteristics.



#### Make your own music!


Babies love all kinds of music—especially when they create it themselves!

- ★ Allow your child to explore the different sounds and melodies that play every time the cars are linked together. Later, encourage your child to attach each car in a different order to create a different response. Every new creation helps empower your child to produce her own musical arrangement!

## INSTRUCTIONS FOR PLAY

Press Leap to hear train songs!

3 ways to play:  
Counting  
Colors  
Music

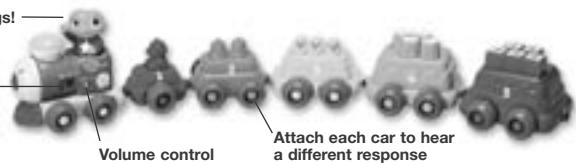

### Getting Started:

Turn on the LEARNING CONNECTIONS™ Train by sliding the volume control switch to either **))** or **)))**. The product will automatically turn off after 2 minutes of inactivity.

How to Play with the LEARNING CONNECTIONS™ Train:

### Counting Mode: 123

- Slide the volume control to **))** or **)))**
- Slide the mode selector to Counting mode.
- Attach a car to hear about the number of objects in that car. Objects include: 1 teddy bear, 2 bells, 3 ducks, 4 drums, or 5 blocks.
- Press conductor Leap to hear a counting song that is based on the number of cars that are attached.

### Colors/Colours Mode:

- Slide the volume control to **))** or **)))**
- Slide the mode selector to Colors/Colours mode.
- Attach a car to hear about the color/colour of each car. Colors/Colours include: Red, Blue, Orange, Green, or Yellow.

- Press conductor Leap to hear a song about colors/colours that is based on the number of cars attached.

### Music Mode:

- Slide the volume control to **))** or **)))**
- Slide the mode selector to Music mode.
- Attach a car to hear a different verse of the train song. Each car added will add a verse to the song, for a total of 5 verses.
- Press Leap to hear a train song that is based on the number of cars attached.

### Stacking:

For quiet play, stack the cars (with the exception of the lead engine) on top of each other from largest to smallest.

### Care and Maintenance:

- Keep product away from foods and beverages
- Clean with a slightly damp cloth
- Never submerge product in water
- Remove batteries from the train for prolonged storage
- Avoid exposing the train to extreme temperatures

### Battery Information:

Batteries included are for in-store demonstration, and should be replaced to improve performance. Requires 3 AA (called LR06 in some countries) alkaline batteries.

### Battery Safety:

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy.

Dispose of used batteries properly.

Remove batteries for prolonged storage.

Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

### Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.

Enlevez rapidement les piles usagées du jouet.

Suivez les procédures adéquates pour vous débarrasser des piles usagées.

Retirez les piles en cas de non-usage prolongé.

Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS INCINÉRER les piles usagées.

NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir.

NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS UTILISER de piles rechargeables.

NE PAS RECHARGER des piles non rechargeables.

NE PAS COURT-CIRCUITER les terminaux d'alimentation.

### Battery Installation:

1. Requires 3 AA (called LR06 in some countries) alkaline batteries.
2. Open the battery door (located on the underside of the lead engine) with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

### TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> <li>• Make sure batteries are correctly installed</li> <li>• Make sure battery cover is securely attached</li> <li>• Remove batteries and put them back in</li> <li>• Clean battery contacts with rubbing alcohol</li> <li>• Install new batteries</li> </ul>
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> <li>• Install new batteries</li> <li>• Clean battery contacts with rubbing alcohol</li> </ul>
Toy makes improper responses	<ul style="list-style-type: none"> <li>• Install new batteries</li> <li>• Clean battery contacts with rubbing alcohol</li> </ul>

### U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at:

<http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at:

<http://lffcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

### U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

### U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

### U.K. Office:

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

**IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.**

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**AVERTISSEMENT :** Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

**CAUTION:** Product contains strong magnets. Keep at least 6" away from pacemakers, and avoid contact with:

- Magnet computer media, including floppy disks, zip disks, removable hard disk drives
- Televisions and computer video monitors
- Other magnetic media, including audio cassette tapes, video cassette tapes, credit cards, ID badges, etc.
- Audio tape recorders
- Iron filings and other ferrous-metal shavings/particles
- Pointed objects of ferrous materials, such as nails, screws, carpet tacks, etc.

**Note:** This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

### Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

**Canada:** In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

**U.K.:** In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, LEARNING BAND, ALPHABET PAL, FRIDGE PHONICS and WORD WHAMMER are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2004 LeapFrog Enterprises, Inc. All Rights Reserved.

Visit our fun-filled Web site at: [www.leapfrog.com](http://www.leapfrog.com)

For ages 9 months and up / Convient aux enfants à partir de 9 mois