

More fun learning toys from LeapFrog!



**Touch and Tug™  
Discovery Book**

Birth



**Learn and Groove™  
Activity Station**

4+ months to walking age



**Learn-Along™  
Lily & Leap**

Birth



**Magic Moments™  
Learning Seat**

Birth to 25 lbs.

# LEAP FROG **Learn-Along™** Piano

Learning melodies will delight babies on the go!



## Parent Guide & Instructions

*This guide contains important information. Please keep it for future reference.*

[www.leapfrog.com](http://www.leapfrog.com)

## How to get the most out of your Learn-Along™ Piano!

### Create Beautiful Music!

Babies love listening to music—especially when they can create it themselves!

★ Encourage your baby to press the different keys on the piano and get familiar with a wide range of pitches, tempos and melodies. Later, change the instrument sounds to introduce new sounds. Then watch baby put it all together to create a variety of different melodies!

### Stimulate the Senses!

Learning comes to life when babies can explore new things using their hands.

★ Allow your baby to explore the different textures on the piano and watch how her simple touches lead to further exploration! Soon your baby will develop a fascination for the variety of textures in her world, and will discover how much fun she can have just by using her fingertips!

### Color/Colour Baby's World!

Colors/Colours help babies distinguish different objects.

★ Turn the piano to Learn mode and let your baby get familiar with the different primary colors/colours as he taps each key. Then, begin identifying the colors/colours of all the other objects in your baby's world. Before you know it, your baby will be able to recognize and name all the colors/colours he sees in his everyday life.



Not all products available in all markets outside the U.S.

# INSTRUCTIONS FOR PLAY

Press to change instrument sounds

3 mode buttons: Learn mode Mistake-Free Music mode Free Play mode

Soft, touch-activated piano keys

Attachment links (on back)

On/Off button

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

Learn mode

Mistake-Free Music mode

Free Play mode

Attachment links (on back)

## Battery Information:

Batteries included are for in-store demonstration, and should be replaced to improve performance. Requires 3 AA (called LR06 in some countries) alkaline batteries.

## Battery Safety:

- Batteries are small objects. Batteries must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Properly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries for prolonged storage.
- Only batteries of the same or equivalent type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

## Sécurité relative aux piles

- Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte.
- Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.
- Évitez rapidement les piles usagées du jouet.
- Suivez les procédures adéquates pour vous débarrasser des piles usagées.
- Retirez les piles en cas de non-usage prolongé.
- Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.
- NE PAS INCINÉRER les piles usagées.
- NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir.
- NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- NE PAS UTILISER de piles rechargeables.
- NE PAS RECHARGER des piles non rechargeables.
- NE PAS COURT-CIRCUITER les terminaux d'alimentation.

## Battery Installation:

- Requires 3 AA (called LR06 in some countries) alkaline batteries.
- Open the battery door (located inside the back of the piano) with a screwdriver.
- Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
- Replace battery door securely.

## TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> <li>Make sure batteries are correctly installed</li> <li>Make sure battery cover is securely attached</li> <li>Remove batteries and put them back in</li> <li>Clean battery contacts with rubbing alcohol</li> <li>Install new batteries</li> </ul>
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> <li>Install new batteries</li> <li>Clean battery contacts with rubbing alcohol</li> </ul>
Toy makes improper responses	<ul style="list-style-type: none"> <li>Install new batteries</li> <li>Clean battery contacts with rubbing alcohol</li> </ul>

## Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

**Canada:** In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

**U.K.:** In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, LEARN-ALONG, LEARN & GROOVE, TOUCH & TUG and MAGIC MOMENTS are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2004 LeapFrog Enterprises, Inc. All rights reserved.

Visit our fun-filled Web site at:

[www.leapfrog.com](http://www.leapfrog.com)

For ages Birth and up

Convient aux enfants à partir de la naissance

## U.S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://fcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

## U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

## U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

## U.K. Office:

Telephone: 0800 169 5435

Fax: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

**IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.**

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**AVERTISSEMENT:** Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

## Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help