

Parent Guide & Instructions

Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

As children grow, they are ready for more complex challenges. For preschoolers, we have a line of products that develop basic fundamentals to help prepare children to enter the classroom. Cheerful characters and delightful songs enhance the play experience while teaching the alphabet, phonics, vocabulary, colors, numbers and counting.

LeapFrog™ learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our Web site (www.leapfrog.com), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Mike Wood

Mike Wood
President
LeapFrog Enterprises, Inc.

This guide contains important information.
Please keep it for future reference.



Disney
PRINCESS
PRINCESS LAPTOP

More fun learning toys from LeapFrog!

Preschool



Imagination Desk™
Learning Activity Center
3+ years



My First LeapPad™
Learning System
3+ years



Phonics Writing Desk™
4+ years



Learning Screen™
Karaoke
4+ years

Inspiring a Lifelong Love of Learning

LANGUAGE DEVELOPMENT

- ✓ Children are introduced to the names and sounds of the letters of the alphabet.
- ✓ Games guide children to spell more than 350 words.
- ✓ Children are introduced to the idea that numbers have names and correspond to a quantity of objects.

EXPLORATION AND CREATIVITY

- ✓ Children can explore the alphabet and numbers as they find and press buttons.
- ✓ LCD reacts with animation and sounds when letters and numbers are pressed.


COGNITIVE DEVELOPMENT

- ✓ Games stimulate cognitive skills including memory and reasoning.
- ✓ Teaches addition and subtraction, the foundation for higher math skills.

MOTOR SKILLS

- ✓ Fine motor skills are developed as children find and press buttons.

INSTRUCTIONS FOR PLAY

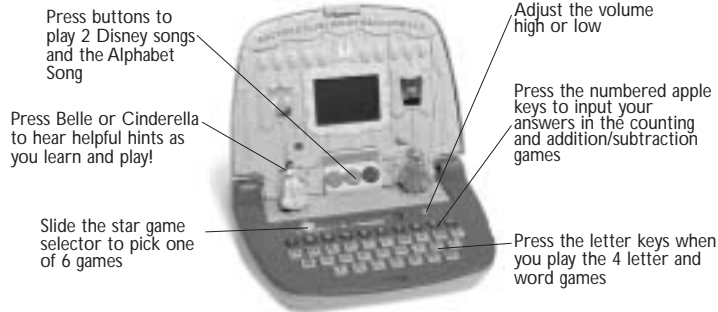

BEFORE YOU START! – To ensure proper function and initial challenge level for your child, the unit will need to be reset. Hold down the character Cinderella and the letter “P,” while sliding the “star” game selector to turn the unit on. A sound effect will let you know the unit is reset.

Multiple games make learning fun!

ABC 123- Letter Names & Sounds

Learn letter names & sounds.

- Turn on the Princess Laptop by moving the game selector to **ABC 123**. The Princess Laptop will ask your child to identify a letter name and sound by its corresponding letter.
- Input the correct letter and the Princess Laptop confirms the correct answer. If an incorrect answer is input, the Princess Laptop will say the incorrect letter. If your child needs a hint, toggle the Belle or Cinderella character.

Learn numbers through rhymes.

- Press a number to hear the number and a rhyme.

C-A-I- Learn the Words

Learn the first letter in 26 different words.

- Move the game selector to **C-A-I**. The Princess Laptop displays a word and asks your child to find the letter that corresponds to the first sound in the word.
- Input the correct letter and the Princess Laptop confirms the correct answer. If an incorrect answer is input, the Princess Laptop will say the incorrect letter. If your child needs a hint, toggle the Belle or Cinderella character.
- Press a number to hear the number and a rhyme.

?-A-I- Mystery Letter

Identify the missing letter in a word.

- Move the game selector to **?-A-I**. The Princess Laptop will ask your child to identify the letter that corresponds to a particular letter name or sound in the word displayed on the screen.
- Input the correct letter and the Princess Laptop confirms the correct answer. If an

incorrect answer is input, the Princess Laptop will say the incorrect letter. If your child needs a hint, toggle the Belle or Cinderella character.

- Press a number to hear the number and a rhyme.

?-?-?- Create a Word

Create your own three-letter words and fun sounds.

- Move the game selector to **?-?-?**, the Princess Laptop will ask your child to create a three-letter word.
- The Princess Laptop repeats the word or sound your child has made.
- Press a number to hear the number and a rhyme.

123- Counting

Find the numbers.

- Move the game selector to **123**. The Princess Laptop will display a number and ask your child to find the number on the keyboard.
- Input the correct number and the Princess Laptop confirms your child's answer. If the incorrect number is input, the Princess Laptop will say the wrong number and repeat the question. If your child needs a hint, toggle the Belle or Cinderella character.

+ - - Addition/Subtraction

Simple addition and subtraction problems.

- Move the game selector to **+ -**. The Princess Laptop will ask your child to solve an addition or subtraction problem.
- Input the correct number and the Princess Laptop confirms the correct answer. If an incorrect answer is input, the Princess Laptop will say the incorrect number. If your child needs a hint, toggle the Belle or Cinderella character.

Off

Turn the game selector to the off position. If the unit is not used for more than 60 seconds, it will automatically shut-off.

Care and Maintenance:

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

Battery Information:

Batteries included are for in-store demonstration purposes, and should be replaced to improve performance.

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

TROUBLESHOOTING	
Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure batteries are correctly installed • Make sure battery cover is securely attached • Remove batteries and put them back in • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Install new batteries • Clean battery contacts with rubbing alcohol
Toy makes improper responses	<ul style="list-style-type: none"> • Install new batteries • Clean battery contacts with rubbing alcohol
Display stops working	<ul style="list-style-type: none"> • Install new batteries

Battery Installation:

1. Requires 4 AA (called LR6 in some countries) alkaline batteries.
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

U.S. Consumer Service Contact:

Please visit our U.S./Canada Consumer Support Web site at <http://www.leapfrog.com/support>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)
Hours: Monday through Friday, 5:00 AM to 7:00 PM and Saturday 7:00 AM to 4:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Tel: 0800 169 5435
Eire: 00 44 1702 200244
Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog Logo, IMAGINATION DESK, LEAPPAD, LEARNING SCREEN and PHONICS WRITING DESK are trademarks or registered trademarks of LeapFrog Enterprises, Inc. © 2003 LeapFrog Enterprises, Inc. All rights reserved.
U.S. Patent No. 5,944,533

© Disney Enterprises, Inc. www.disney.com

MADE IN CHINA

Visit our fun-filled Web site at: www.leapfrog.com
For ages 3 years and up