

More fun learning videos and products from LeapFrog!



Inspiring a lifelong love of learning

Language Skills

Children are introduced to the names and phonemes of each letter in the alphabet. Music and rhyming help children recognize letter sounds and how sounds make words.

Exploration and Creativity

Children are encouraged to explore the alphabet, phonemes and word building through songs and hands-on play. Music and singing encourage memory retention of key learning concepts.

Cognitive Development

Music and melodies develop cognitive and memory skills.

Motor Skills

Children practice hand-eye coordination as they manipulate the flash cards.



Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

As children grow, they are ready for more complex challenges. For preschoolers, we have a line of products that develop basic fundamentals to help prepare children to enter the classroom. Cheerful characters and delightful songs enhance the play experience while teaching the alphabet, phonics, vocabulary, colors/colours, numbers and counting.

LeapFrog™ learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our Web site (www.leapfrog.com), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Mike Wood

Mike Wood
Founder
LeapFrog Enterprises, Inc.



SING-ALONG
LETTERS



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference

www.leapfrog.com



Flash cards and music CD based on the Letter Factory™ and Talking Words Factory™ videos.



Letter Factory™
Video, 3 + years



Math Circus™
Video, 3 + years



Talking Words Factory™
Video, 3 + years



Talking Words Factory™ 2:
Code Word Caper Video,
3 + years



Word Whammer™
Fridge Phonics™ Set, 3 + years



Letter Factory™
Game, 3 + years

INSTRUCTIONS FOR PLAY



The front of the cards show letter characters and letter training room scenes from the Letter Factory™ video!



The back of the cards show each letter in upper and lowercase form, and feature fun parent-child letter activities!



Card storage case



CD (with storage case) includes songs from the Letter Factory™ and Talking Words Factory™ videos, as well as 4 bonus songs!

How to Play with Sing-Along Letters Flash Cards and CD:

Getting Started:

- Remove the flash cards from the wrapping and card case.
- Follow the activities on the letter cards or use the cards to try one or more of the activities listed below.
- Insert the CD into a player, push play and sing along!

Letter Activities:

Each card has suggested activities that you can follow to help your child learn the letter names and letter sounds. Choose a card and pick an activity. Once you and your child have finished one, move on to the next card!

Letter Name Recall:

Show your child the upper/lowercase side of the card and ask him or her to identify the letter.

Letter Sound Recall:

Show your child the video scene side of the card and ask what sound the letter makes.

Word Building:

Arrange the flash cards into words. Consonant-vowel-consonant combinations are the best place to start. Examples include: BUG, CAT, DOG, HEN, PIG, TAD and TEN. Then, visit www.leapfrog.com/singalong to find and print complete word lists that will encourage your child to spell new words!

Here are some ideas to make word building a fun, shared learning experience:

- 1) Spread the cards out on the floor and pick out a common word ending such as -IN, -AT, -UG, etc. Pretend that you and your child are Whammy (the Word Whammer 3000 from the Talking Words Factory™ video) by adding initial letters to the word ending and building a series of rhyming words. (Example: -AT, HAT, RAT, SAT, etc.)
- 2) Build a word that represents common household items such as JUG, PEN, KID, etc. Ask your child to read the word you have built and then find the object in the house.
- 3) Look around the room and find common words (consonant-vowel-consonant words are often easiest for children to master) such as CAT, RUG, HAT, etc. Point to these objects and ask your child to build the corresponding word.
- 4) Build a word using the flash cards and then ask your child to copy the word onto a piece of paper.
- 5) Pick out 6 letter cards: B, P, A, I, N and T. Then ask your child to move the cards around to build three-letter words. See how many words you and your child can build using these 6 letters.

Song List:

- 1) Mr. Websley is Coming Around
- 2) Every Letter Makes a Sound—Letter Factory Finale
- 3) Sticky Icky Vowels
- 4) Word Building Conga
- 5) The Blends Rock
- 6) I Can Do It!—Talking Words Factory Finale
- 7) ABC Samba—Bonus
- 8) Driving to the Letter—Bonus
- 9) Cool Speller—Bonus
- 10) We Love the Sounds that Letters Make—Bonus

Get Song Lyrics from www.leapfrog.com:

Visit www.leapfrog.com/singalong to find lyrics for all of the songs on the CD! Just follow the on-screen instructions.

Care and Maintenance:

- Keep cards and CD away from food and beverages
- Clean CD with clean, dry cloth. Wipe lightly.
- Never submerge the cards or CD in water.
- Avoid bending, biting or fraying the flash cards.
- Store cards in the card case for best results.
- Store CD in the CD case for best results.
- Do not scrape the CD with hard objects or surfaces.
- Avoid exposing product to extreme temperatures.

U.S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lfcana.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT:

Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

AVERTISSEMENT :

Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product

is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada:

In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.:

In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, WORD WHAMMER FRIDGE PHONICS, LETTER FACTORY, TALKING WORDS FACTORY and MATH CIRCUS are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2005 LeapFrog Enterprises, Inc. All rights reserved.

Visit our fun-filled Web site at: www.leapfrog.com

For ages 2 years and up.