

**Leap Frog** **Fridge Wash & go**  
magnetic vehicle set



Learn about colors and vehicles  
as you mix and match!

**Parent Guide & Instructions**

This guide contains important information. Please keep it for future reference.

**Learning Skills**

**Mix, match and learn!**

**Matching**

Matching vehicles and colors encourages children to observe and recognize similarities and differences.

**Vehicle Names and Sounds**

Silly sound effects paired with lively narration help children make connections between vehicle names and sounds.

**Colors**

Cheerful voices and songs describe vehicles by their colors, helping children build color recognition and matching skills.

**Fine Motor Skills**

Grasping and moving the vehicle pieces encourages the development of fine motor skills.

**More Learning That Sticks!**



**FRIDGE DJ™**  
magnetic  
learning radio  
12+ months

**FRIDGE PHONICS™**  
magnetic alphabet  
2+ years



**FRIDGE TALK™**  
magnetic wordplay  
recorder  
3+ years

Additional products sold separately. All items may not be available in all countries. Actual products may vary.



**See the Learning.™**

Learning experiences are never one-size-fits-all. That's why we created an online Learning Path that can be custom-tailored to shape and inspire each child's unique learning journey. Connect and see what they're learning, how they're growing and, most importantly, who they're becoming.

[leapfrog.com/toys](http://leapfrog.com/toys)

The LeapFrog® Learning Path is not available in all countries.



**Register your product online!**

You can also sign up to receive learning progress updates, articles, product news and special offers from LeapFrog.

**leapfrog.com**

Don't have web access? See the reverse side for instructions on how to register by mail.

## Instructions for Play

Vehicle tiles and reader attach to any magnetic surface

High/low volume control

Push the Stoplight button to hear 5 playful melodies

Mix and match vehicle pieces to make 25 different combinations



Includes 5 vehicles—10 interchangeable pieces in all!

### Getting Started

To turn on FRIDGE WASH & GO™ magnetic vehicle set, slide the switch to the desired low or high volume setting. To turn it off, slide the switch to off.

Note: FRIDGE WASH & GO magnetic vehicle set will automatically turn off after 60 seconds of inactivity. You can start playing again by placing a vehicle tile into the reader or pressing the Stoplight button.

### Play and Learn!

Insert a vehicle piece into the reader and press it to hear the vehicle name and color. Make a real vehicle match and hear a silly song. Press again to learn interesting facts about the vehicle. Mix and match the vehicle tiles to make your own imaginative vehicle with silly songs to celebrate your creation. Press the Stoplight button to hear five instrumental melodies.

### Instructions For Care

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

### Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AAA (called LR03 in some countries) alkaline batteries.

#### Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

### Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (i.e., alkaline/standard).

**DO NOT** use rechargeable batteries.

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** short-circuit the supply terminals.

### Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** utiliser des piles rechargeables.

**NE PAS** recharger des piles non rechargeables.

**NE PAS** court-circuiter les bornes d'alimentation.

**⚠ WARNING:** This product contains inaccessible magnets. Should the toy break or magnets ever become exposed, remove the toy from use. Magnets should not be eaten or inhaled. Swallowed magnets can stick together across intestines causing serious infections and death. Seek immediate medical attention if magnets are swallowed or inhaled.

**⚠ AVERTISSEMENT:** Les aimants contenus dans ce produit sont hors d'atteinte des enfants. Confiner ce jouet s'il vient à se briser ou si un contact avec les aimants devient possible. Un aimant n'est pas fait pour être mangé ou inhalé. L'ingestion par un enfant d'au moins deux aimants (qui peuvent s'attirer mutuellement et perforer ses intestins) risque de provoquer des lésions intestinales pouvant s'avérer mortelles. En cas d'ingestion ou même d'inhalation, contactez de toute urgence votre médecin.

**⚠ CAUTION:** Product contains strong magnets. Keep at least 6 inches (15 cm) away from pacemakers and avoid contact with the following:

- Magnetic computer media, including floppy disks and removable hard disk drives
- Televisions and computer video monitors
- Other magnetic media, including audio cassette tapes, credit cards, ID badges, etc.
- Audio tape recorders
- Iron filings and other ferrous-metal shavings/particles
- Pointed objects of ferrous materials, such as nails, screws, carpet tacks, etc.

May scratch painted or magnetic surfaces.

**⚠ ATTENTION:** Ce produit contient des aimants puissants. Gardez-le à une distance minimum de 6 pouces (15 cm) d'un stimulateur cardiaque et évitez tout contact avec :

- les supports informatiques magnétiques tels que disquettes, disques Zip, disques durs amovibles
- les postes de télévision et écrans vidéo d'ordinateur
- les autres supports magnétiques tels que cassettes audio, cassettes vidéo, cartes de crédit, badges d'identité, etc.
- les magnétophones
- la limaille de fer et autres ébarbures/particules de métaux ferreux
- les objets pointus en matériaux ferreux tels que clous, vis, punaises, etc.

Peut rayer les surfaces peintes ou magnétiques.

## Troubleshooting

### Symptom

Toy does not turn on or does not respond

### Try This

- Make sure the OFF/LOW/HIGH switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

**U.S. Consumer Service Contact:** Visit our U.S. Consumer Support website at <http://www.leapfrog.com/support> 24 hours a day.

**Canada Consumer Service Contact:** Visit our Canada Consumer Support website at <http://ifcanada.custhelp.com> 24 hours a day.

**U.K. Consumer Service Contact:** Visit our U.K. Consumer Support website at <http://leapfroguk.custhelp.com> 24 hours a day.

**Australia Consumer Service Contact:** Please submit questions to our support staff via email at [info@funtastic.com.au](mailto:info@funtastic.com.au).

### FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

**NOTE:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.

- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

**LIMITED WARRANTY:** Subject to a limited three (3) month warranty. Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

**GARANTIE LIMITÉE :** Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse [www.leapfrog.com](http://www.leapfrog.com) pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

### Product Registration

Register your product online at [leapfrog.com](http://leapfrog.com) or mail us the following information:

- First and last name
- Street address, city, state, zip code
- Age of purchaser
- Email address
- Child's birth date (optional)
- The LeapFrog product that you purchased
- Yes, I would like to receive learning progress updates, articles, product news and special offers from LeapFrog (optional)

Your privacy is important to LeapFrog. To learn more about how we use and protect your information, please review our Privacy Policy at [www.leapfrog.com/en/corplinks/privacy.html](http://www.leapfrog.com/en/corplinks/privacy.html).

### U.S. Residents

Mail your information to:  
LeapFrog  
ATTN: Product Registration  
P.O. Box 981123  
El Paso, TX 79998-1123

### Canadian Residents

Mail your information to:  
LeapFrog Canada  
466 Speers Rd., 3rd Floor  
Oakville, Ontario  
L6K 3W9  
CANADA

### U.K. Residents

Mail your information to:  
LeapFrog Toys (U.K.) Limited  
36 Windsor Street, Uxbridge  
Middlesex, UB8 1AB  
UNITED KINGDOM

### Residents of Australia and New Zealand

Mail your information to:  
Funtastic Limited  
635 Waverley Road  
Glen Waverley  
Victoria 3150  
AUSTRALIA

Registration of your product is not required for your warranty or to use the product.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, FRIDGE WASH & GO, FRIDGE DJ, FRIDGE TALK, FRIDGE PHONICS and SEE THE LEARNING are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2008 LeapFrog Enterprises, Inc. All rights reserved.

### leapfrog.com

For ages 12 months and up. / Convient aux enfants à partir de 12 mois.

Part number: 605-11294-B