

The LittleTouch LeapPad learning system and library bring all of the delightful LittleTouch characters to life. Look for the entire system at a store near you!



© 2005 VIACOM INTERNATIONAL INC. All rights reserved.

Sold separately.
Not all books available in all markets.

© Disney Enterprises, Inc.



Roll & Rhyme™ Learning Elephant



Toodle-doo!
Spin my tummy for
shapes, surprises and
sweet songs!

LittleTouch™

Learning Collection

Parent Guide & Instructions
This guide contains important information. Please keep it for future reference.
leapfrog.com

How to Get the Most Out of Your Roll & Rhyme™ Learning Elephant!

Encourage language learning with songs and rhymes.

★ As your baby plays with Elephant, he'll hear delightful songs and rhymes. Sing Elephant's songs to your little one as you look in the mirror together. For example, touch baby's nose and sing, "I can do lots of things with my baby face. My nose smells!" He'll enjoy this time with you as he learns about his facial features.

Nurture creativity and language development through pretend play.


★ You can also encourage language development by pretending to have animated conversations with Elephant. Your child can imitate these active, two-way conversations as she invents creative games and stories to act out with her new friend.

Comfort your baby with special daytime and nighttime routines.

★ Soothe your baby to sleep with Elephant's nighttime scenes, gentle light and melodies. When it's time for bed, remind baby that the stars are out and it's time to say good night. Start each day by waking up Elephant and swinging and stomping with the active song.



INSTRUCTIONS FOR PLAY

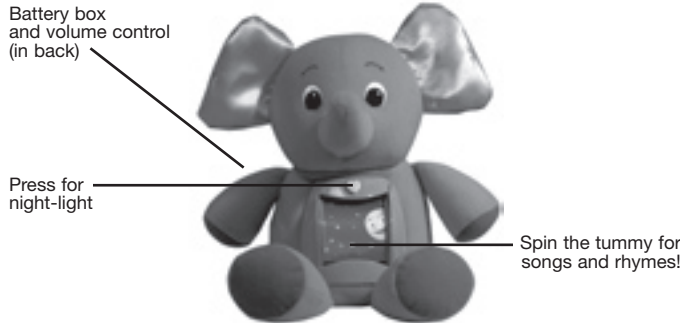

Getting Started

Turn on the product by moving the OFF/LOW/HIGH switch from OFF to LOW or HIGH. The OFF/LOW/HIGH switch is located on the battery box in the back.

There are two ways to play with your ROLL & RHYME™ Learning Elephant: Bat at Elephant's tummy for active play or touch his heart to activate a night-light!

- Use the active play setting for learning with colors/colours, sounds and lights!
 - Spin Elephant's tummy to see scenes.
 - The roller will stop on a nighttime scene or a daytime scene. Elephant will light up with songs and rhymes!
- Use the calming night-light setting to get baby ready for sleep.
 - To activate the night-light, hold the heart-shaped button down for 5 seconds.
 - The tummy will light up and go into sleep mode. (Sounds and music will not play even if you spin Elephant's tummy.)
 - The night-light will gently fade out after 5 minutes.
 - Press the heart-shaped button momentarily to restart the night-light.
 - Hold the heart-shaped button down for 3 seconds to go back to active mode.

Volume Control

Move the volume switch located on the battery box from the OFF position to the LOW or HIGH position.

INSTRUCTIONS FOR CARE

- Keep food and beverages away from product.
- Clean with a slightly damp cloth (cold water).
- Do not use soap or detergent.
- Never submerge the unit in water.
- Remove batteries during prolonged storage.
- Avoid prolonged exposure to extreme temperatures and direct sunlight.
- Avoid dropping the unit. Never try to dismantle it.

Battery Information:

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Battery Safety:

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. Batteries in products used for in-store demonstration should be replaced with alkaline batteries for home use. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Sécurité relative aux piles :

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent. Les piles incluses dans les produits lors de l'achat sont uniquement destinées aux démonstrations en magasin et doivent être remplacées pour améliorer les performances du produit. NE PAS INCINÉRER les piles usagées. NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir. NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard). NE PAS UTILISER de piles rechargeables. NE PAS RECHARGER des piles non rechargeables. NE PAS COURT-CIRCUITER les terminaux d'alimentation.

Battery Removal and Installation Instructions:

- Requires 3 AA (called LR6 in some countries) alkaline batteries.
- Open the battery door with a screwdriver.
- If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
- Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> Make sure the OFF/LOW/HIGH switch is not in the OFF position. Make sure batteries are correctly installed. Make sure battery cover is securely attached. Remove batteries and put them back in. Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth. Install new batteries.
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth. Install new batteries.
Toy makes improper responses	<ul style="list-style-type: none"> Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth. Install new batteries.

U.S. Consumer Service Contact

Search for frequently asked questions, review your previous questions or submit a question to our support staff via email 24 hours a day at our U.S. Consumer Support website at <http://www.leapfrog.com/support>. If you do not have Internet access, please call (800) 701-LEAP (5327) during normal business hours.

Canada Consumer Service Contact

Search for frequently asked questions, review your previous questions or submit a question to our support staff via email 24 hours a day at our Canada Consumer Support website at <http://lfcanada.custhelp.com>. If you do not have Internet access, please call (800) 701-LEAP (5327) during normal business hours.

U.K. Consumer Service Contact

Search for frequently asked questions or submit a question to our support staff via email 24 hours a day at our U.K. Consumer Support website at <http://leapfroguk.custhelp.com>. If you do not have Internet access, please call 0800 169 5435, or Eire +44 (0)1702 200244, during normal business hours.

Australia Consumer Service Contact

Please submit questions to our support staff via email at info@funtastic.com.au or free-call 1800 244 543 during normal business hours.

IMPORTANT: If you have a problem with this product, return it to the retailer where the product was purchased for exchange. If the retailer is unable to assist you for any reason, contact LeapFrog Consumer Services. If our service representative is unable to help you resolve the problem, you will be given instructions on how to replace the product and an authorization number. Returns must have a Return Merchandise Authorization (RMA) number to be accepted at our warehouse. If you need replacement parts for this product, please contact LeapFrog Consumer Services.

CAUTION: This is not intended as a crib toy. To prevent injury, NEVER add strings, ties or other products to this item.

ATTENTION : Pour éviter tout danger d'enchevêtrement, ne jamais rajouter de ficelles, rubans ou toute autre attache à ce jouet.

FCC NOTICE: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc. could void the user's authority to operate this equipment.

Warranty Information

This LeapFrog® product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. All warranty claims are subject to: (1) LeapFrog being notified of the warranty claim within the warranty period, (2) LeapFrog verifying the existence of a defect in the product and (3) receipt of valid proof of your purchase date.

Before returning a product to LeapFrog for any reason, please notify the LeapFrog Consumer Services department. If the service representative is unable to solve the problem, you will be provided with instructions as to how to go about having the unit repaired or replaced if it is under warranty. Return of a product under warranty is governed by the following rules: If LeapFrog believes that there may be a defect in materials or workmanship and LeapFrog confirms your purchase date, LeapFrog will provide you with prepaid shipping instructions for returning the product. Otherwise, you must return your product, shipping prepaid and with proof of purchase date, as instructed by a LeapFrog service representative. In the event that a product under warranty is repaired or replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer. Repair or replacement is your exclusive remedy, and LeapFrog's exclusive liability, under this warranty. Replacement may consist of replacing the product with the same product or with a different product of the same value. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state and country to country.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. You may also have other rights under U.K. law, which this warranty does not limit.

Australia: You may also have other rights under consumer protection conditions and warranties implied by Australia federal, state and territory laws.

LEAPFROG, the LeapFrog Baby logo, LEAPPAD, LITTLETOUCH and ROLL & RHYME are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2007 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 6 to 36 months.

Convient aux enfants de 6 à 36 mois.