

The LittleTouch™ learning system and library bring all of the delightful LittleTouch characters to life. Look for the entire

system at a store near you!




Not all books available in all markets.

© Disney Enterprises, Inc.

Dr. Seuss Properties TM & © 2004 Dr. Seuss Enterprises, L.P. All Rights Reserved.



Lulu the Letter-Spinning Spider™

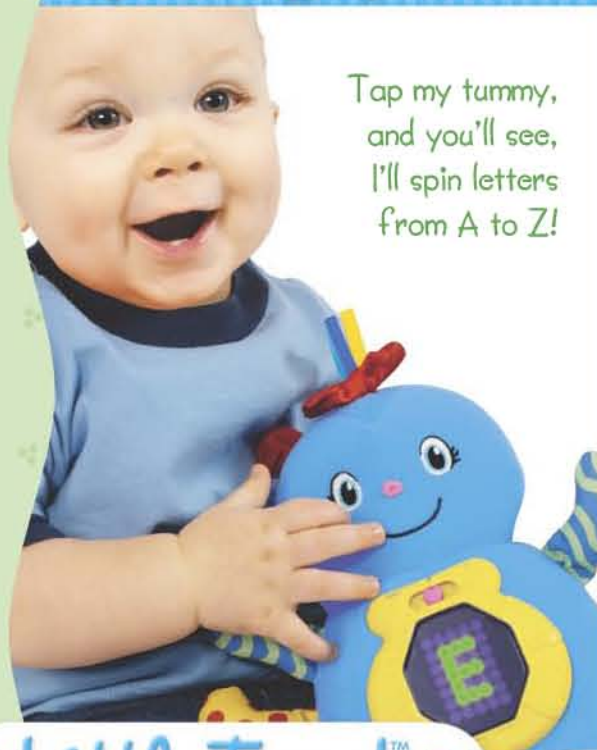

Tap my tummy, and you'll see, I'll spin letters from A to Z!

LittleTouch™

Learning Collection

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

www.leapfrog.com

How to Get the Most Out of Your Time with Lulu!

Combine reading and play to make learning letters fun!

- ★ Lulu is inspired by the character from the imaginative world of the LittleTouch™ book *Lulu the Letter-Spinning Spider* (sold separately). Add this book to your library



and read to your child, encouraging him to learn all the letters of the alphabet with her new friend Lulu. Seeing and hearing the alphabet early in life builds early reading skills.

Develop motor skills as you play!

- ★ Show your child how to tap Lulu's tummy and see and hear his letters. As your child bats Lulu's tummy, he is rewarded with letters, lights and sounds that encourage further exploration.

Learn letters in your everyday world!


- ★ Ask your child to go on a letter hunt. Encourage him to find all the letters of the alphabet he can—in books, on signs or at the grocery store! When you find a letter, say it out loud, clap, and even recite one of Lulu's rhymes! Learning with your baby can be as fun and silly as you make it.

Sing along to reinforce letter learning!

- ★ Lulu teaches through music! Sing Lulu's alphabet songs with your child. By doing so, you are reinforcing your child's familiarity with letter names and introducing a fun way to learn and remember letters.

LittleTouch™
LeapPad™
Learning System

INSTRUCTIONS FOR PLAY

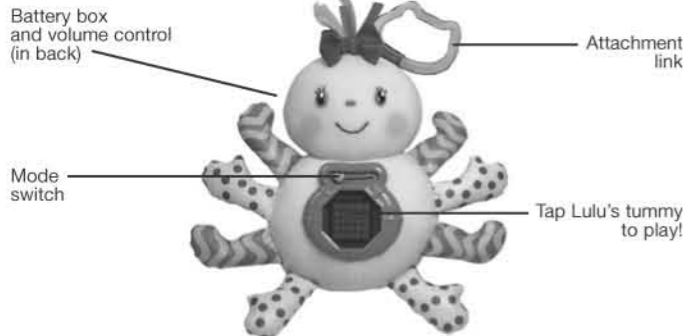

Getting Started:

Turn on the product by moving the OFF/LOW/HIGH switch, located on the back of the product, from OFF to LOW or HIGH.

Lulu offers three modes of play: Letter Names, "The Alphabet Song" and Mystery Letter.

Letter Names

- Slide the heart-shaped mode switch to **A B C**.
- You'll hear the tune "Itsy Bitsy Spider" in the background.
- Tap Lulu's tummy to see and hear the letters of the alphabet.
- Advance from A to Z with each tap!

"The Alphabet Song"

- To hear Lulu sing "The Alphabet Song," slide the heart-shaped mode switch to **A B C**.
- You'll see each letter A to Z on her tummy as she sings.
- Tap the screen during the song and you'll hear a fun sound, but the song won't end!

Mystery Letter

- Slide the heart-shaped mode switch to **A ? ?**.
- In Mystery Letter mode, Lulu spins a randomly selected letter of the alphabet and asks your child to guess the letter as it is formed.
- Tap her tummy and she'll recite a fun rhyme and spin a letter. The screen will light up gradually while she spins the letter—showing you how to write the letter!
- When Lulu is finished spinning her letter, she invites you to say the name of the letter with her.
- Tap her tummy to see her spin another surprise letter!

Volume Control:

Move the volume switch, located on the battery box, from the OFF position to the LOW or HIGH position.

Care and Maintenance:

- Keep product away from food and beverages.
- Clean with a slightly damp cloth.
- Never submerge product in water.
- Remove batteries from product for prolonged storage.
- Avoid exposing the product to extreme temperatures.

Battery Information:

Batteries included are for in-store demonstration, and should be replaced to improve performance. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Battery Safety:

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Sécurité relative aux piles :

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent. NE PAS INCINÉRER les piles usagées. NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir. NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard). NE PAS UTILISER de piles rechargeables. NE PAS RECHARGER des piles non rechargeables. NE PAS COURT-CIRCUITER les terminaux d'alimentation.

Battery Installation:

1. Requires 3 AA (called LR6 in some countries) alkaline batteries.
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure batteries are correctly installed. • Make sure battery cover is securely attached. • Remove batteries and put them back in. • Clean battery contacts with rubbing alcohol. • Install new batteries.
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Clean battery contacts with rubbing alcohol. • Install new batteries.
Toy makes improper responses	<ul style="list-style-type: none"> • Clean battery contacts with rubbing alcohol. • Install new batteries.

U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lfcana.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)
Hours: Monday through Saturday, 5:00 a.m. to 7:00 p.m., Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435
Eire: 00 44 1702 200244
Hours: Monday through Friday, 9:00 a.m. to 5:00 p.m.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

AVERTISSEMENT : Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

CAUTION: To prevent entanglement injury, "NEVER" add strings, ties or other products to this item.

ATTENTION : Pour éviter tout danger d'enchevêtrement, ne jamais rajouter de ficelles, rubans ou toute autre attache à ce jouet.

Note: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus meets all the requirements of the Canadian Interference Causing Equipment Regulations. Cet Appareil numérique de la classe B respecte toutes les exigences du Règlement sur la matériel brouilleur du Canada.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog Baby logo, LEAPPAD, LITTLETOUCH and LULU THE LETTER-SPINNING SPIDER are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2005 LeapFrog Enterprises, Inc. All rights reserved.

Visit our fun-filled Web site at: www.leapfrog.com

For ages 6 to 36 months.

Convient aux enfants de 6 à 36 mois.