




# Tag™ Reader Settings and Help

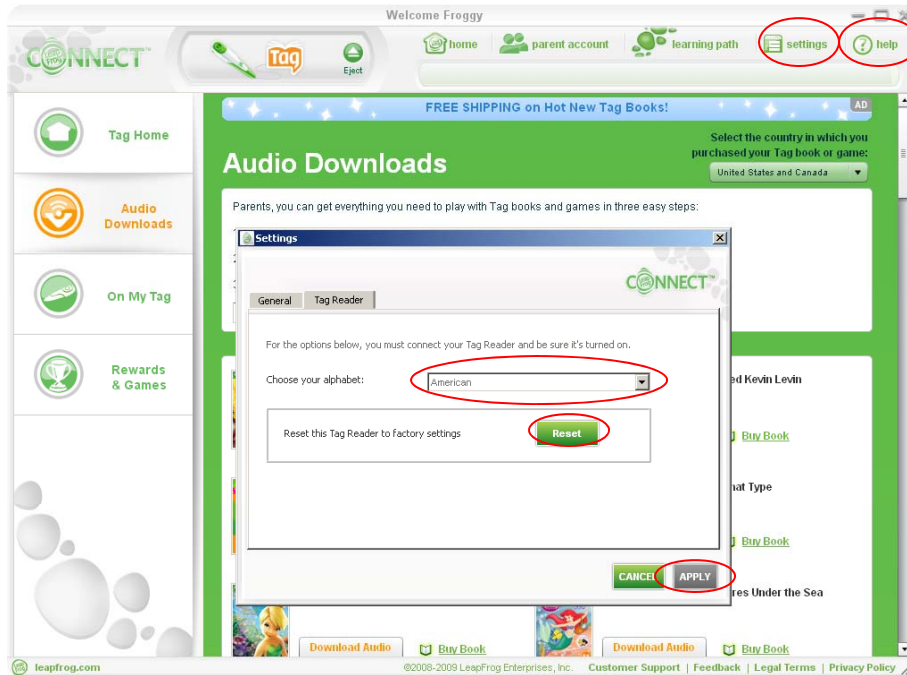

To change the settings for the LeapFrog Connect Application and your child's Tag™ Reader, click on the settings tab at the top of the screen.

On the Tag Reader tab, you can set the alphabet to either the American or Canadian/Queen's English alphabet, which changes the zee/zed letter.

If you need to restore your child's Tag Reader because it isn't functioning properly, click the RESET button. If you do this, you will need to resave the audio for all your child's books back onto the Tag Reader.

To apply these changes click the APPLY button.

If at any point you have a question about Settings or any other aspect of the LeapFrog Connect Application, click the help button on the top toolbar.